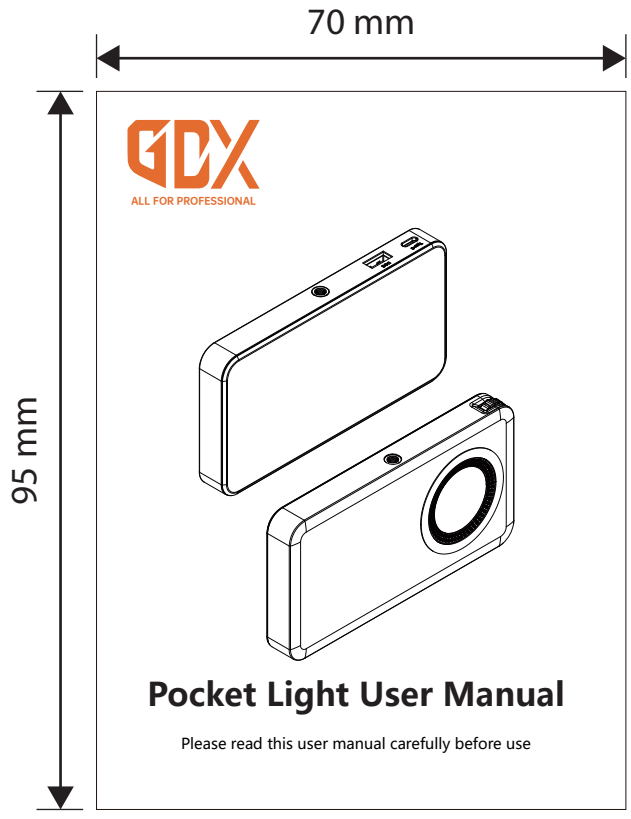


ALL FOR PROFESSIONAL

Pocket Light User Manual

Please read this user manual carefully before use

Standardized use of Equipment

Carefully read this manual, especially the "Important Notes" section.
Use and store this product under the working conditions specified in this manual.
If this product is not used in accordance with this manual, or if the prescribed working and storage conditions are not followed,it will be considered as illegal use.

Notice:

1.The product is not waterproof, please use it in a rain-proof environment.
2.The product is not anti-corrosion, do not let the product come into contact with any corrosive liquid.
3.When using the product, make sure the product is placed firmly to prevent the product from falling and damage.
4.Do not place the product in high temperature, strong electromagnetic field, direct sunlight, or high temperature environment.
If you do not use the product for a long time, please disconnect the power supply.

Important Notes

1.Before cleaning, unplug the power cord and use a damp cloth instead of any cleaning agents or solvents to avoid damaging the surface layer.
2.Ensure the power supply remains within the specified operating range, as excessively high or low voltage may affect performance.
3.In case of malfunction or performance degradation, do not open the casing yourself to avoid damaging the device and voiding the warranty. If a fault occurs, contact us at any time, and we will do our best to resolve the issue.
4.This product is a precision instrument. Avoid dropping, colliding, or subjecting it to heavy impacts during use.
5.For repairs, please contact authorized service personnel. The product contains delicate electronic circuits. Unauthorized disassembly resulting in malfunctions is not covered under warranty, but paid repairs are available.
6.It is recommended to use original manufacturer cables. Any damage caused by non-original accessories is not covered under warranty, but paid repairs are available
7.This product has passed ROHS and CE certifications. Please refer to relevant national standards for usage and operation. Damage caused by improper use or operation is not covered under warranty, but paid repairs are available.
8.This manual is based on rigorous testing by our company. Design and specifications are subject to change without prior notice.

Operating Instructions

Bi-Color Mode:

Short press "M" to reach the Bi-Color screen.
Short press the Select Button to move the blue indicator to Color Temperature (CCT) or Brightness (BRI), then use the dial to adjust.



RGB Mode:

Short press "M" to reach the RGB screen.
Short press the Select Button to move the blue indicator to Hue (H), Saturation (SAT), or Brightness (BRI), then use the dial to adjust.



Light Effects Mode:


Short press "M" to reach the Effects screen.
Short press the Select Button to move the blue indicator to Effect Type, Flash Frequency (FREQ), or Brightness (BRI), then use the dial to select effects or adjust frequency/brightness.



Special Effects Mode (13FX)				
Lightning	Flicker (Bad Bulb)	Paparazzi	Candlelight	Ambulance
Fireworks	Police Car	TV	Strobe(Fire truck)	SOS
Laser	Color Cycle	Bonfire		

※Note: The screen will turn off after 1 minute of inactivity. Press any button to wake it.

Product Overview

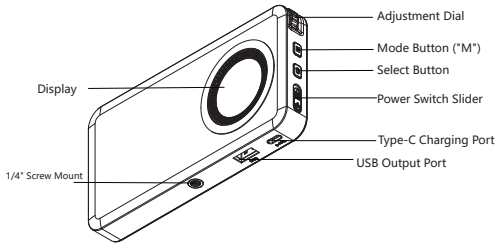

Packing List



Light*1



Hot Shoe Mount*1



Type-C Cable*1

Product Parameters

Name	Pocket Light
Power	12W
CCT	2700-7500K(±200K)
RGB Range	0-360°
Product Size	150*80*18MM
Net Weight	193g
Charging Port	Type-C/ USB
Product Color	Orange/Pink/White
Runtime	≈100 Minutes
Lumen	1102 LM (7500K)
Llluminance	2812 LUX (0.3 Meters)
Input Voltage	5V 3A
Fixed Interface	1/4 Screw Hole
CRI	95 +
Effects	13FX
Charging Time	≈2H
Power Supply Mode	Built-In Battery+Type-C Power Supply
Product List	Light*1， "1/4" Hot Shoe, Charging Cable* 1

Specifications are based on laboratory test data and may vary depending on the environment in which they are used. The final right of interpretation belongs to our company.

Made in China

Warranty Card

Product Model		Seller Name	
User Name		Seller Phone	
User Phone		Seller Address	
User Address		Date of Sale	

Note: This form must be stamped and confirmed by the seller.

Warranty Period

The warranty period begins on the date of the product's initial purchase, as recorded on the warranty card at the time of purchase.

How to Obtain Warranty Service

You may contact the product seller or an authorized service provider directly to request warranty service. A valid warranty card must be provided as proof of warranty eligibility. If you are unable to present a valid warranty card, we may still provide warranty service if the product or part is confirmed to be within the warranty scope, though this shall not be considered an obligation on our part.

Cases Not Covered by Warranty

This warranty shall not apply if the product exhibits any of the following conditions:
① The product or part has exceeded the applicable warranty period.
② Malfunction or damage resulting from misuse, improper maintenance, or storage, such as improper handling, use outside the product's intended purposes, incorrect insertion/removal of external devices, drops, physical impact, or exposure to unsuitable temperatures, solvents, acids, alkalis, liquids, or moisture.
③ Damage caused by installation, repair, modification, addition, or disassembly performed by unauthorized personnel or organizations.
④ Alteration, removal, or tampering with the original identification information of the product or part.
⑤ Absence of a valid warranty card.
⑥ Malfunction or damage resulting from the use of unauthorized, non-standard, or unofficial software.
⑦ Failure or damage caused by force majeure or accidents, or any other issues not attributable to a defect in the product itself.
In any of the above cases, you should seek resolution from the relevant responsible party. Our company assumes no liability. Failures caused by components, accessories, or software not covered by the warranty or outside the warranty period are not considered warranty defects. Normal discoloration, wear, and consumption during product use are also not covered under this warranty.